


For flawless action . . . as many as 90 contacts
in a crescendo shoe must be precisely regulated.

Tradition

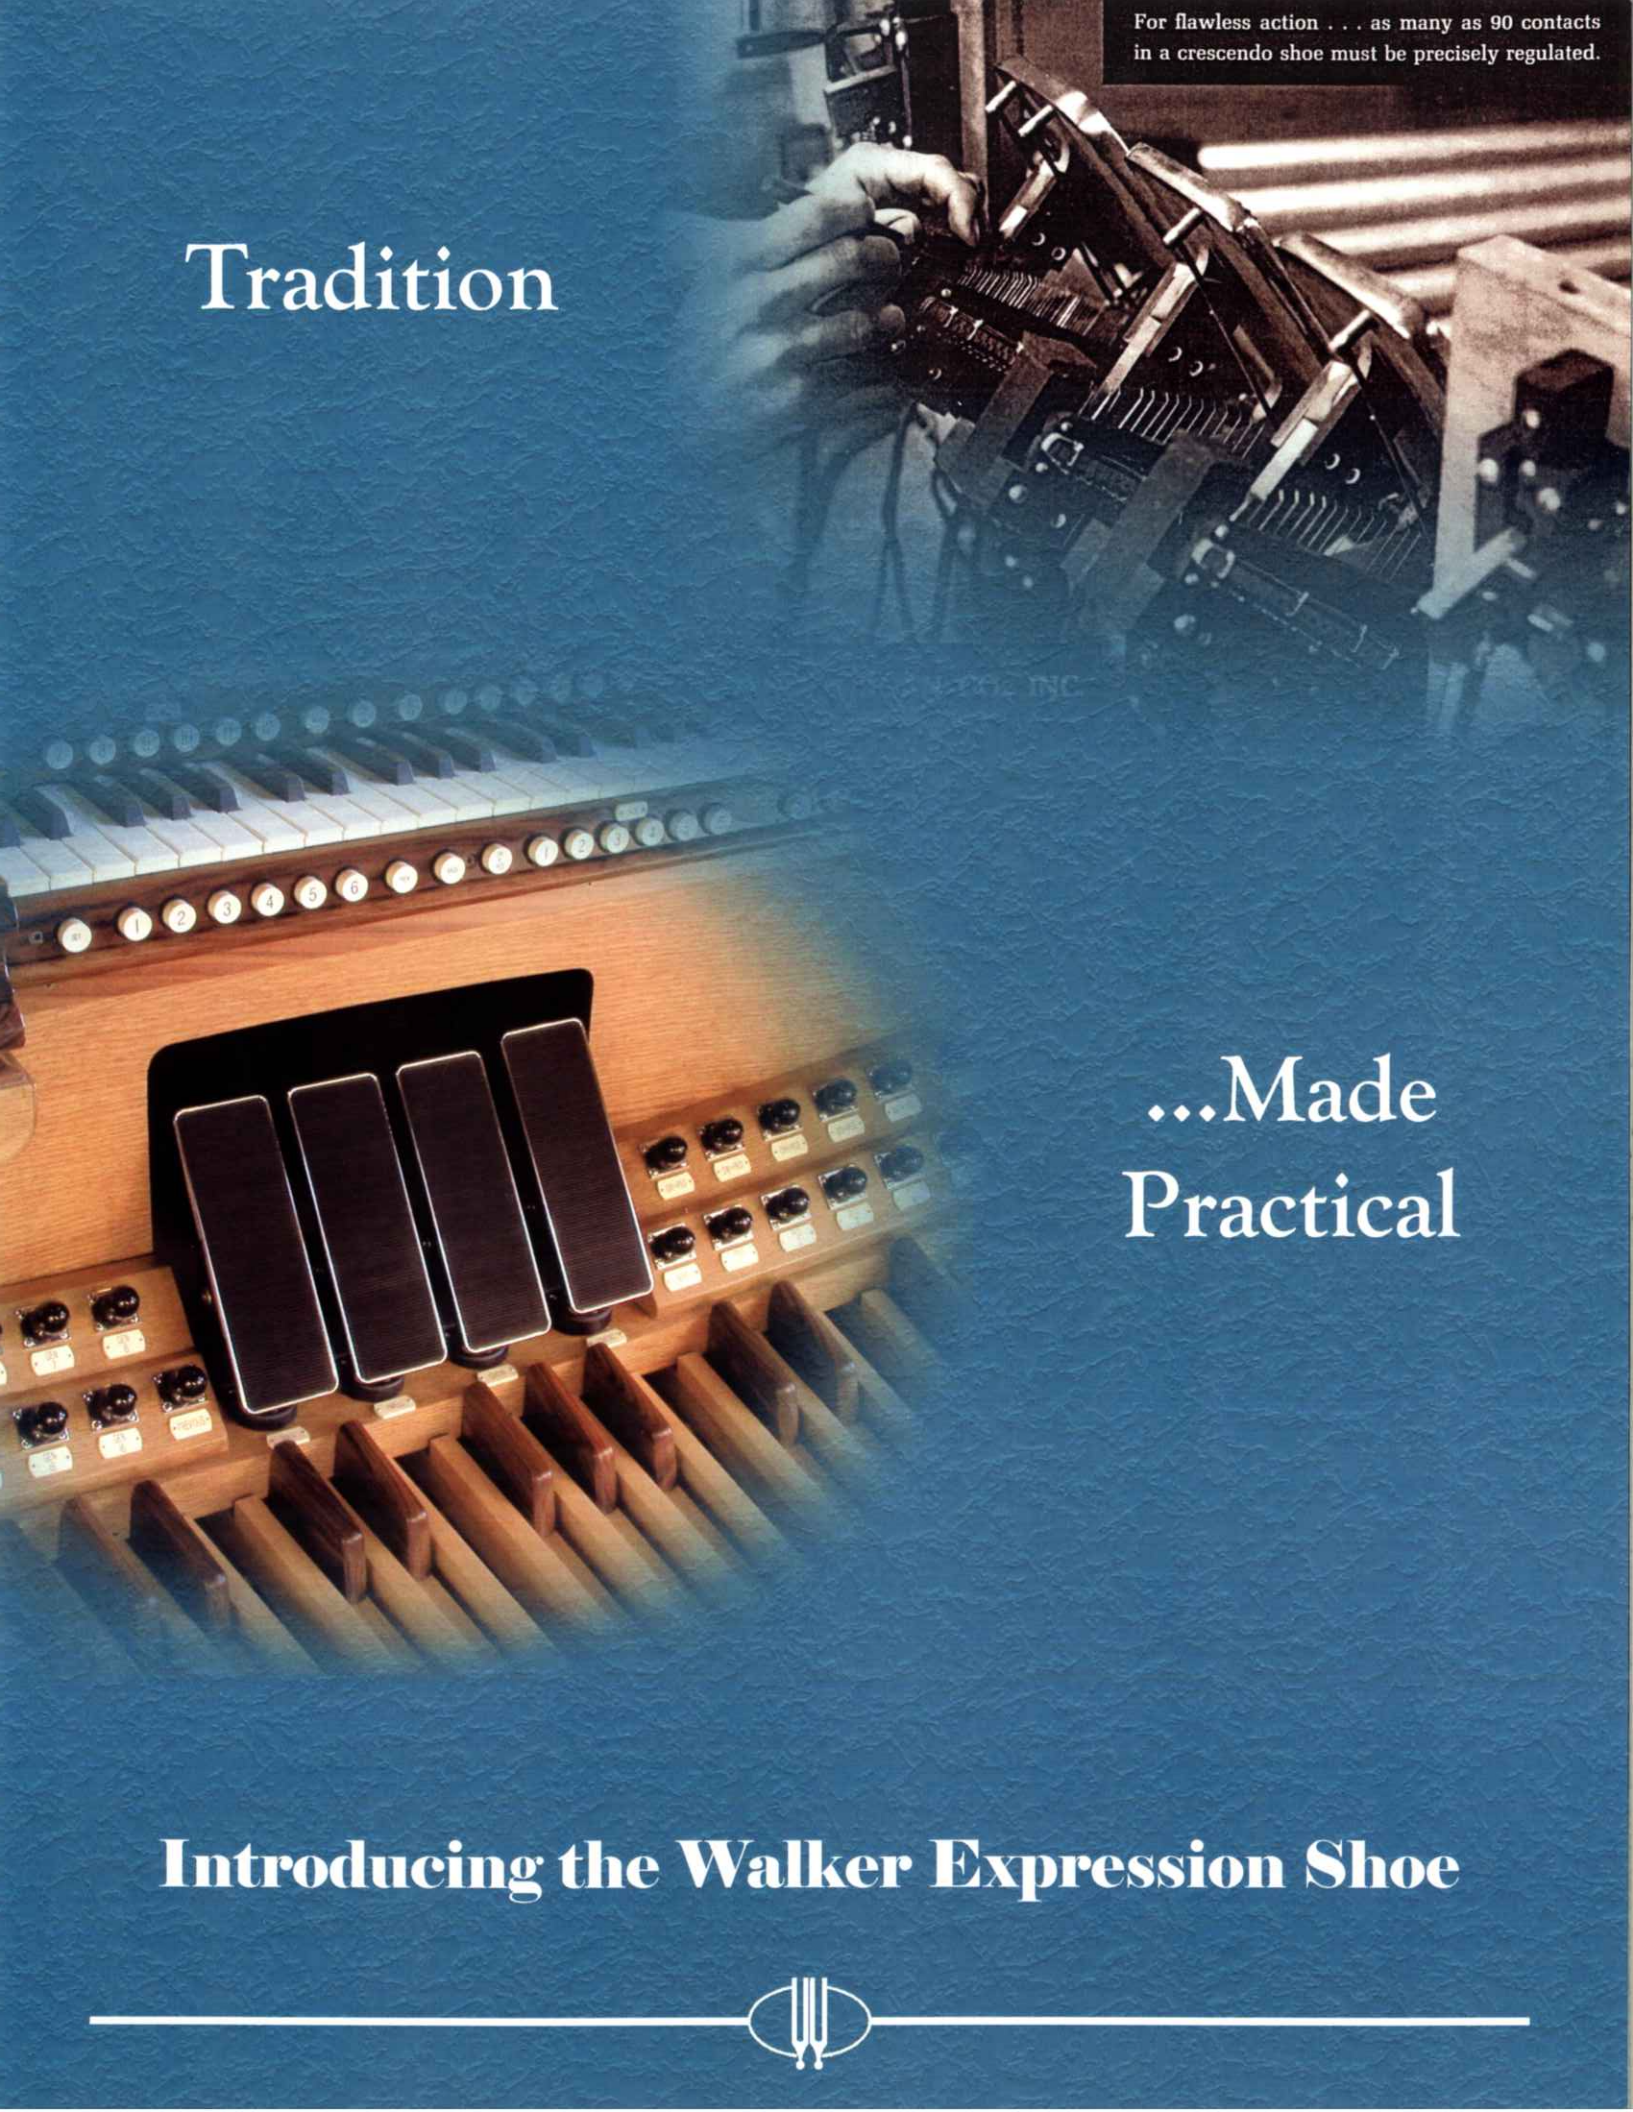


...Made Practical

Introducing the Walker Expression Shoe




Fits Like an Old Shoe

The Walker Expression Shoe is the latest offering in our continuing pursuit of elegant yet simple solutions for the organ builder. The design is patterned after the Æolian-Skinner® shoe, long recognized for its visual and ergonomic appeal. We've improved and simplified the mechanism, and added a host of configuration options allowing the shoe to adapt to almost any situation with ease. All at a surprisingly affordable price. For full specifications and drawings, or to discuss your specific requirements, call us at (610) 966-2515.

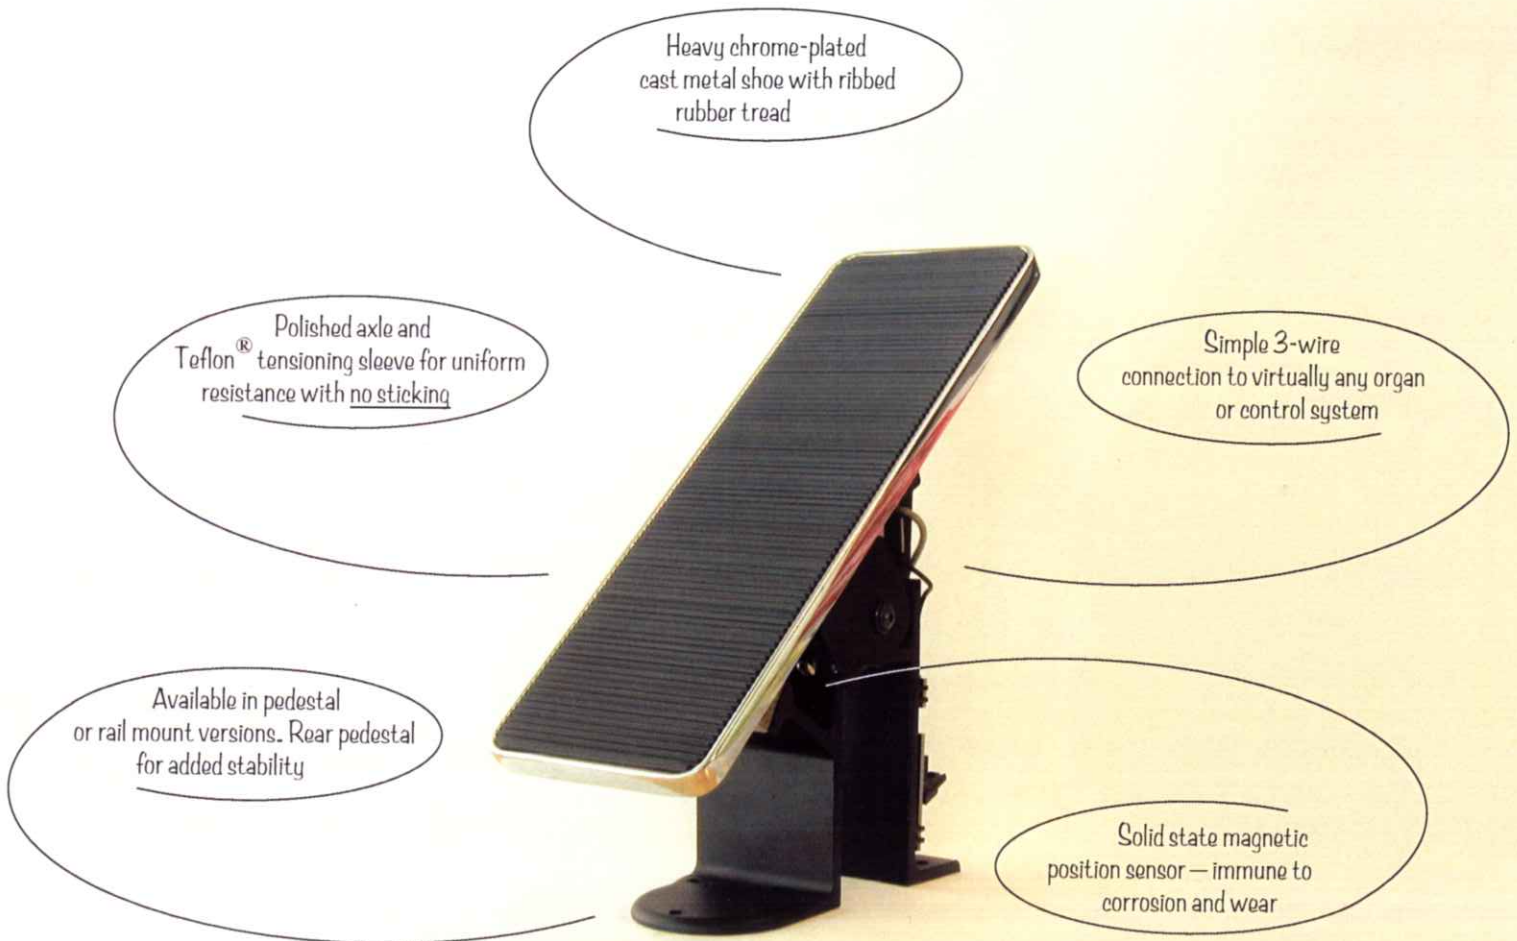

Additional Features:

- Can be used to replace expression and crescendo shoes with potentiometers or contact rollers up to 64 stages.
- Reliable plug-in connectors make servicing fast and easy.
- Two-color status lamp indicates proper operation and helps diagnose fault conditions.
- Simple one-time shoe calibration in seconds without tools. No contacts or potentiometers to adjust or wear out.

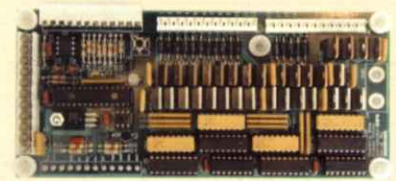

Stage Output Boards can be used to directly replace contact rollers driving magnets down to 25 ohms, with negative or positive common. These boards can be located remotely, and require only 3 wires to the shoe.



6610 Crown Lane, Zionsville, PA 18092

610/966-2515 FAX 610/966-2033

*Æolian-Skinner is a registered trademark of Walker Technical Co.
Teflon is a registered trademark of the DuPont Corporation*